

**"6B-S"**

# **Illustrated Parts List**

## **MODEL SERIES**

### **"6B-S"—"6B-SF"—"6B-SFB"— "6B-SR-6"**

•

#### **HOW TO FIND THE CORRECT NUMBER OF THE PART YOU NEED**


These instructions are to be followed when using a Parts List to determine the correct part for an engine.

• • • • •


- A. Refer to Engine Model, Type and Serial Number that is stamped on the blower housing or name plate of engine. Then use the Illustrated Parts List covering this Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Master Part Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.

PRINTED IN U. S. A. AT B. & S.




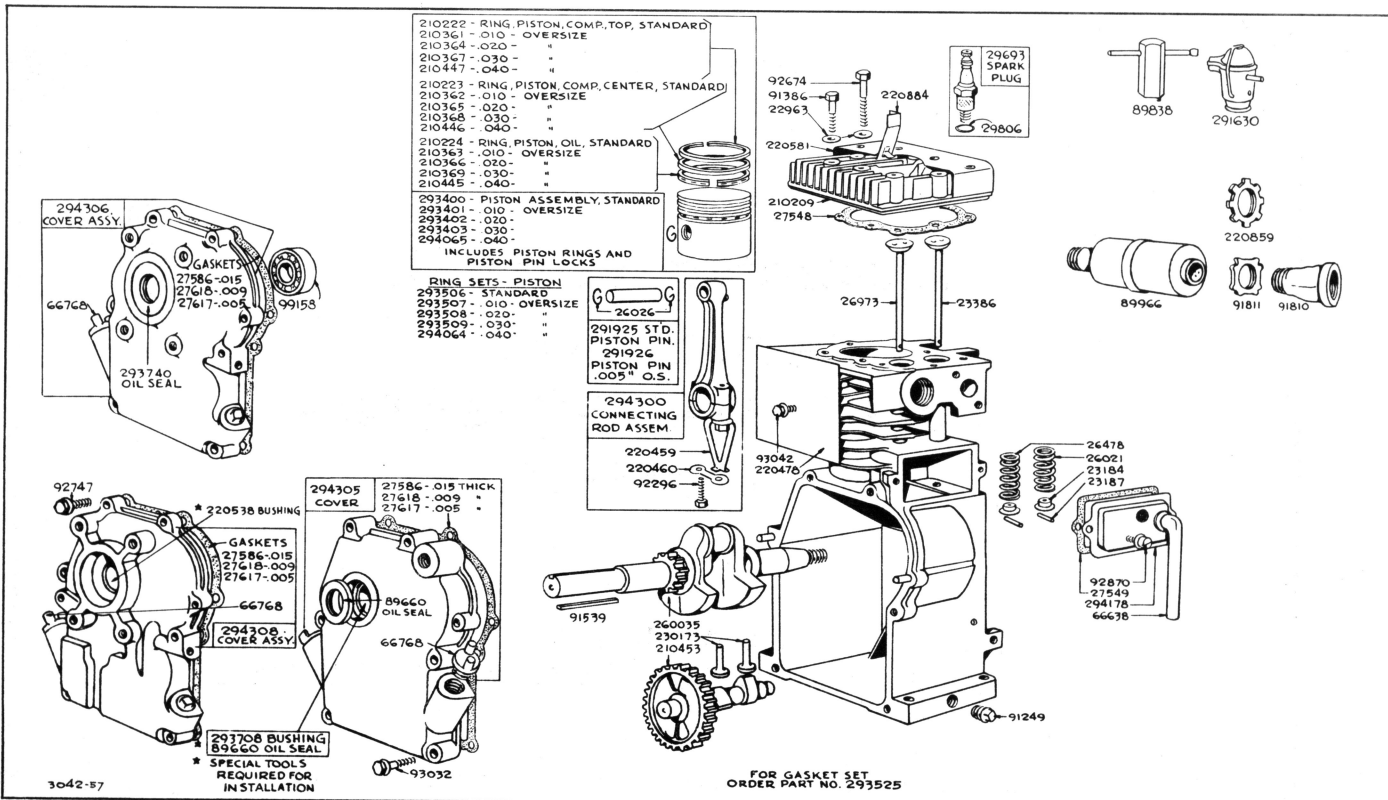

**CYLINDER, PISTON, CONNECTING ROD, AND CRANKSHAFT PARTS**  
Assemblies include all parts shown in frames.

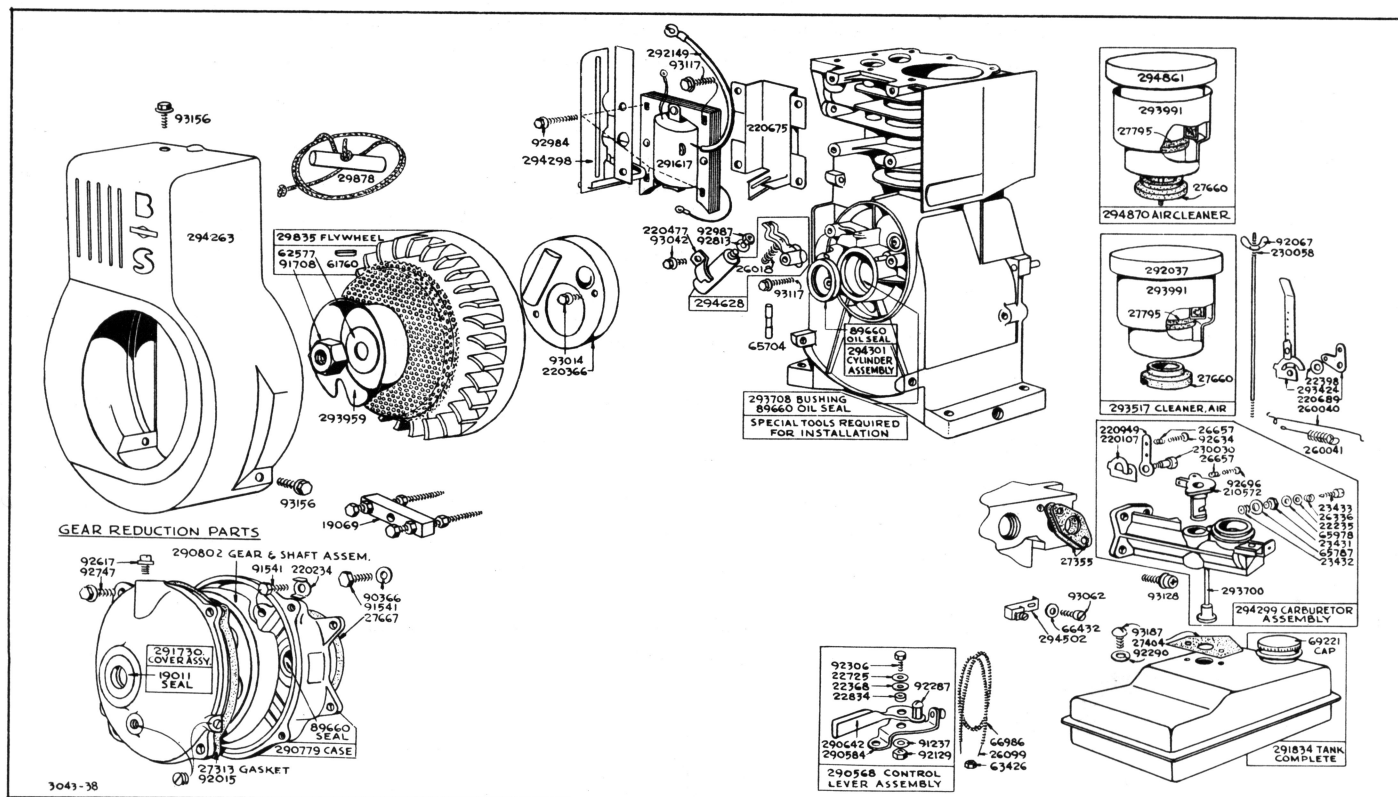

CYLINDER, PISTON, CONNECTING ROD, AND CRANKSHAFT PARTS  
Assemblies include all parts shown in frames.

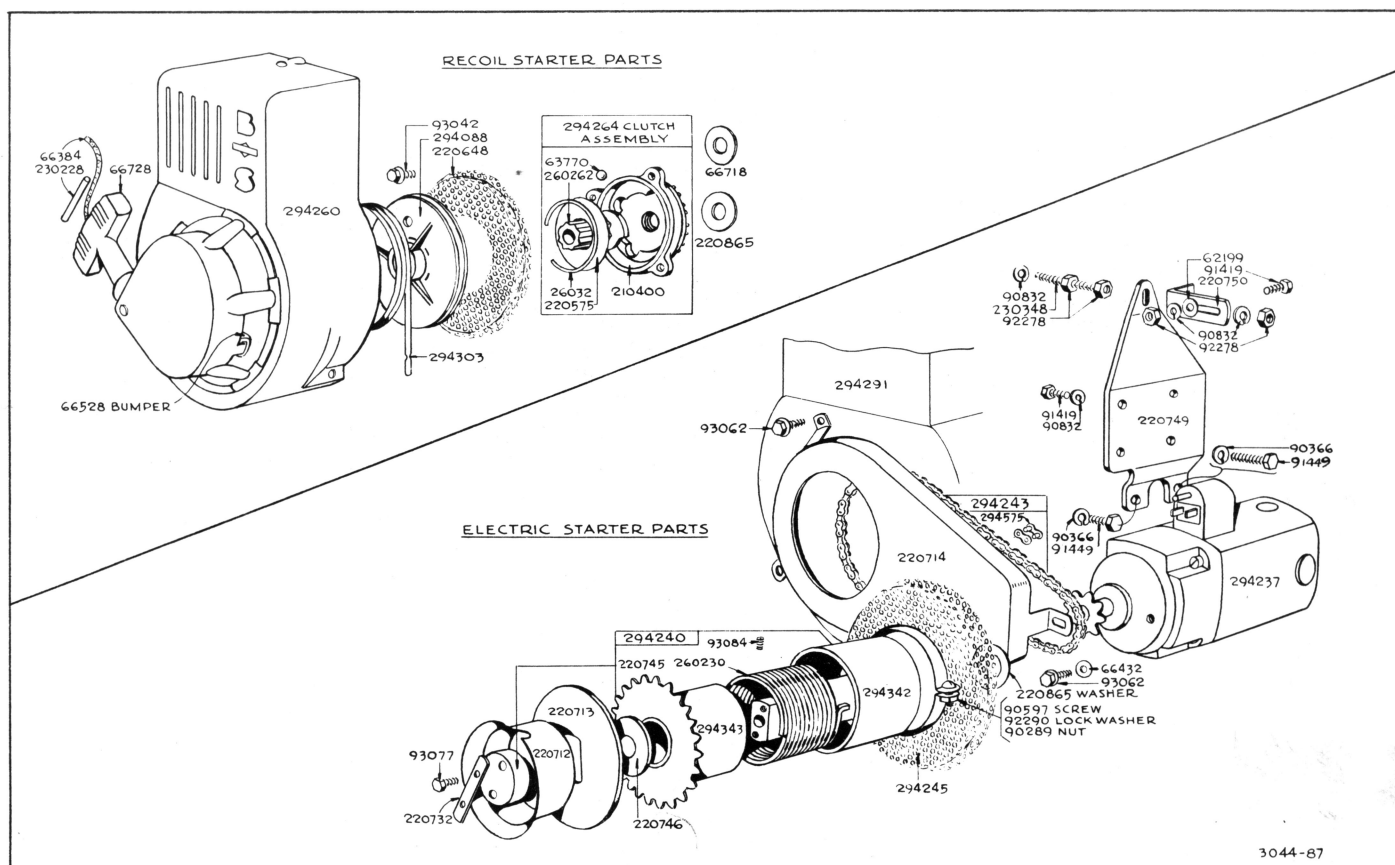

RECOIL AND ELECTRIC STARTER PARTS  
Assemblies include all parts shown in frames.

PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION
19011	Seal - Oil	23386	Valve - Intake		Adjustment Screw
19069	Puller - Flywheel (Optional Accessory)	<b>Note:</b> No. 26973	Valve - Exhaust	26973	Valve - Exhaust
22235	Washer - Needle Valve	Used on type No. 901203.		<b>Note:</b> No. 260075	Valve - Exhaust
22368	Washer - Control Lever	23431	Nut - Needle Valve	Used on type No. 901203.	
22398	Washer - Bell Crank	23432	Seat - Needle Valve	27313	Gasket - Gear Case Cover
22725	Washer - Control Lever	23433	Valve - Needle	*27355	Gasket - Intake Elbow Mounting
22834	Washer - Spacer	26018	Spring - Breaker Arm	*27404	Gasket - Fuel Tank Mounting
22963	Washer - Cylinder Head	26021	Spring - Intake Valve	*27548	Gasket - Cylinder Head
23184	Retainer - Valve Spring	26026	Lock - Piston Pin	*27549	Gasket - Valve Cover
<b>Note:</b> No. 292259	Rotocap - Exhaust Valve	26032	Spring - Clutch Retainer	*27586	Gasket - Crankcase - .015" Thick (Standard)
Used on type No. 901203.		26099	Wire - Control - 54" Long	*27617	Gasket - Crankcase - .005" Thick
23187	Pin - Valve Spring Retainer	<b>Note:</b> If longer wire is needed, specify length by inches; if shorter wire is needed order No. 26099 and cut to required length.		*27618	Gasket - Crankcase - .009" Thick
<b>Note:</b> No. 230126	Pin - Exhaust Valve Rotocap Retainer	26336	Spring - Needle Valve	27660	Gasket - Air Cleaner Mounting
No. 230127	Retainer - Exhaust Valve Rotocap	26478	Spring - Exhaust Valve	<b>Note:</b> No. 27666	Gasket - Air Cleaner Mounting
Used on type No. 901203.		<b>Note:</b> No. 26826	Spring - Exhaust Valve	Used on type Nos. 901214, 901223, 901224.	
* Included in Gasket Set - Part No. 293525.		26657	Spring - Speed and Throttle	27667	Gasket - Gear Case

PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION
27795	Gasket – Air Cleaner <b>Note:</b> No. 27402 – Gasket – Air Cleaner (Cup type) Used on air cleaners without attached stud.		<b>No. 292054</b> Muffler Used on type Nos. 901022, 901023, 901029, 901030, 901051, 901052, 901063, 901073, 901085, 901093, 901096, 901112, 901120, 901178, 901183, 901197, 901205.	92015	Plug – Oil Drain (Gear Cover)
29693	Plug – Spark – With Gasket		<b>No. 294441</b> Muffler Used on type Nos. 901021, 901626, 901028, 901037, 901040, 901045, 901047, 901048, 901055, 901056, 901057, 901058, 901067, 901071, 901072, 901074, 901076, 901084, 901087, 901088, 901091, 901097, 901107, 901113, 901116, 901118, 901119, 901121, 901123, 901129, 901133, 901134, 901135, 901141, 901144, 901154, 901156, 901164, 901166, 901169, 901172, 901173, 901179, 901180, 901182, 901185, 901202, 901203, 901206, 901209, 901210, 901219, 901220, 901227, 901228, 901236, 901248.	92067	Nut – Wing
29806	Gasket – Spark Plug			92129	Nut – Hex. – $\frac{1}{4}$ -28
29835	Flywheel – Magneto			92278	Nut – Hex. – $\frac{1}{4}$ -20
29878	Rope – Starter			92287	Screw – Machine, Rd. Hd. – $10\text{-}32 \times \frac{1}{4}$ "
32418	Washer – Chain Guard Mounting			92290	Washer – Lock – No. $10 \times \frac{1}{4} \times \frac{3}{64}$ "
61760	Key – Flywheel			92296	Screw – Connecting Rod
62199	Washer – Fuel Tank Bracket			92306	Screw – Cap, Hex. Hd. – $\frac{1}{4}$ -28 $\times \frac{5}{8}$ "
62577	Washer – Flywheel			92617	Plug – Breather
63426	Locknut – Control Wire Casing			92634	Screw – Machine, Rd. Hd. – $5\text{-}40 \times \frac{5}{8}$ "
63770	Ball – Clutch			92674	Screw – Cylinder Head ( $2 \frac{3}{8}$ " Long)
65704	Plunger – Breaker Point			92696	Screw – Machine, Rd. Hd. – $5\text{-}40 \times \frac{3}{4}$ "
65787	Gasket – Needle Valve Nut			92747	Screw – Crankcase Cover and Gear Case Mounting Sem
65978	Packing – Needle Valve			92813	Washer – Lock – Shakeproof
66384	Rope – Starter <b>Note:</b> If longer rope is needed, order No. 66514 and cut to required length.			92870	Screw – Breather Mounting Sem
66432	Washer – Control Wire Casing Bracket and Chain Guard	90081	Screw – Machine, Rd. Hd. – $10\text{-}32 \times \frac{1}{2}$ "	92984	Screw – Armature Mounting Sem
66528	Bumper – Starter Pulley	90289	Nut – Square – $10\text{-}32$	92987	Nut – Condenser Terminal
66638	Tube – Breather <b>Note:</b> No. 295217 Breather Tube and Spacer Used on type Nos. 901214, 901223, 901224. Used between valve cover and the air cleaner.	90366	Washer – Lock – $\frac{5}{16} \times \frac{1}{8} \times \frac{1}{16}$ "	93014	Screw – Dust Cover Mounting Sem
66718	Washer – Starter Clutch, Thrust Used only in clutch with square shaft ratchet.	90597	Screw – Machine, Rd. Head – $10\text{-}32 \times \frac{1}{2}$ "	93032	Screw – Crankcase Cover Mounting Sem
66728	Grip – Starter Rope	90832	Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{5}{64}$ "	93042	Screw – Rotating Screen, Condenser Clamp and Cylinder Shield Mounting Sem
66768	Plug – Oil Filler	91237	Washer – Lock – $\frac{1}{4} \times \frac{3}{32} \times \frac{3}{64}$ "	93062	Screw – Control Bracket and Chain Guard Mounting Sem
66986	Casing – Control Wire – 48" Long <b>Note:</b> If a longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.	91249	Plug – Pipe, $\frac{1}{4}$ ", Square Head <b>Note:</b> No. 93139 Plug – Oil Drain, Hex. Hd. Used on type Nos. 901012, 901071, 901084, 901116, 901221.	93077	Screw – Clamp Mounting
69221	Cap – Fuel Tank	91386	Screw – Cylinder Head ( $2$ " Long)	93084	Screw – Set, Socket Hd., Cup Point – $10\text{-}32 \times \frac{1}{4}$ "
89660	Seal – Oil <b>Note:</b> No. 294207 Seal-Oil Used on type Nos. 901217, 901220.	91419	Screw – Cap, Hex. Head – $\frac{1}{4}$ -20 $\times \frac{5}{8}$ "	93117	Screw – Contact Post and Coil Lead Mounting Sem
89838	Wrench – Spark Plug	91449	Screw – Cap, Hex. Hd. – $\frac{5}{16}$ -18 $\times \frac{1}{8}$ "	93124	Screw – Fuel Tank Mounting
89966	Muffler <b>Note:</b> No. 29807 Muffler Used on type Nos. 901145, 901151, 901153, 901162, 901165, 901217. Exhaust tubing is not included with muffler; furnished by equipment manufacturer.	91539	Key – $\frac{3}{16}$ " Square	93128	Screw – Carburetor Mounting Sem
		91541	Screw – Cap, Hex. Hd. – $\frac{5}{16}$ -24 $\times \frac{7}{8}$ "	93156	Screw – Blower Housing Mounting Sem
		91708	Nut – Flywheel	93187	Screw – Fuel Tank Mounting (Use Part No. 93124)
		91810	Elbow – Exhaust, $45^\circ$ , Street <b>Note:</b> No. 61755 Fitting – Exhaust Hose Used on type Nos. 901145, 901162, 901165, 901217. Uses: No. 63783 Fitting (To fasten Part No. 61755 to cylinder). No. 91812 Elbow – Exhaust – $90^\circ$ Street Used on type Nos. 901077, 901132, 901140, 901190.	99158	Bearing – Ball
		91811	Locknut – Exhaust Elbow	210209	Head – Cylinder
				210222	Ring – Piston, Compression, Top – Standard
				210223	Ring – Piston, Compression, Center – Standard
				210224	Ring – Piston, Oil – Standard
				210361	Ring – Piston, Compression, Top – .010" O.S.
				210362	Ring – Piston, Compression, Center – .010" O.S.
				210363	Ring – Piston, Oil – .010" O.S.



PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION	
210364	Ring - Piston, Compression, Top - .020" O.S.	220859	Locknut - Muffler and Exhaust Elbow		901203, 901205, 901206, 901208, 901210, 901213, 901216, 901218, 901219, 901221, 901222, 901223, 901224, 901225, 901226, 901228, 901229, 901230, 901231, 901233, 901234, 901235, 901236, 901239, 901240, 901242, 901244, 901246, 901248.	
210365	Ring - Piston, Compression, Center - .020" O.S.	220865	Washer - Spring (Used to lock starter clutch)		<b>No. 260100</b> Crankshaft Used on type Nos. 901170, 901194, 901237.	
210366	Ring - Piston, Oil - .020" O.S.	220884	Switch - Stop		<b>No. 260103</b> Crankshaft Used on type No. 901101.	
210367	Ring - Piston, Compression, Top - .030" O.S.	220949	Lever - Speed Adjuster		<b>No. 260117</b> Crankshaft Used on type Nos. 901241, 901243.	
210368	Ring - Piston, Compression, Center - .030" O.S.	230030	Screw - Carburetor Cam and Lever		<b>No. 260119</b> Crankshaft Used on type Nos. 901021, 901084, 901121, 901153.	
210369	Ring - Piston, Oil - .030" O.S.	230058	Stud - Air Cleaner		<b>No. 260206</b> Crankshaft Used on type No. 901186.	
210400	Housing - Starter Clutch	<b>Note:</b> <b>No. 91225</b> Screw - Machine, Fill. Hd. - 10-32 x 1"			<b>No. 260209</b> Crankshaft Used on type No. 901187.	
210445	Ring - Piston, Oil - .040" O.S.	<b>No. 92290</b> Washer - Lock			<b>No. 260228</b> Crankshaft Used on type Nos. 901057, 901071, 901089, 901118, 901123.	
210446	Ring - Piston, Compression, Center - .040" O.S.	<b>No. 230412</b> Spacer			<b>No. 260229</b> Crankshaft Used on type No. 901058.	
210447	Ring - Piston, Compression, Top - .040" O.S.	Used to mount cover to carburetor air intake on type Nos. 901145, 901146, 901151, 901153, 901162, 901165.			<b>No. 260239</b> Crankshaft Used on type No. 901081.	
210453	Gear - Cam	230173	Tappet - Valve		<b>No. 260242</b> Crankshaft Used on type No. 901073.	
210572	Throttle - Carburetor	230228	Pin - Starter Grip		<b>No. 260247</b> Crankshaft Used on type No. 901027.	
<b>Note:</b> <b>No. 210568</b> Throttle - Carburetor		230348	Stud - Chain Tension Adjusting		<b>No. 260248</b> Crankshaft Used on type Nos. 901061, 901090, 901217.	
Used on type Nos. 901186, 901245.		260035	Crankshaft		<b>No. 260266</b> Crankshaft Used on type Nos. 901109, 901247.	
<b>No. 210571</b> Throttle - Carburetor		<b>Note:</b> <b>No. 26945</b> Crankshaft			<b>No. 260271</b> Crankshaft Used on type No. 901105.	
Used on type Nos. 901095, 901204.		Used on type Nos. 901022, 901085, 901150.			<b>No. 260272</b> Crankshaft Used on type Nos. 901110, 901155.	
Uses: <b>No. 220105</b> Connector - Governor Link		<b>No. 260036</b> Crankshaft			<b>No. 260375</b> Crankshaft Used on type No. 901245.	
220107	Cam - Speed Adjuster	Used on type Nos. 901100, 901103.			260040	Link - Governor
220234	Lock - Gear Case Mounting Screw	<b>No. 260037</b> Crankshaft			<b>Note:</b> <b>No. 260155</b> Link - Governor	
220366	Cover - Breaker Point and Condenser	Used on type No. 901168.			Used on type Nos. 901095, 901204.	
220459	Dipper - Connecting Rod	<b>No. 260038</b> Crankshaft			260041	Spring - Governor
220460	Lock - Connecting Rod Screw	Used on type Nos. 901158, 901232.			260230	Spring - Clutch
220477	Clamp - Condenser	<b>No. 260048</b> Crankshaft			260262	Ratchet - Rewind Starter
220478	Shield - Cylinder	Used on type Nos. 901011, 901012, 901023, 901026, 901028, 901029, 901032, 901035, 901037, 901038, 901040, 901041, 901044, 901045, 901046, 901047, 901049, 901051, 901052, 901054, 901055, 901056, 901059, 901060, 901062, 901065, 901066, 901067, 901070, 901072, 901074, 901076, 901080, 901083, 901087, 901088, 901092, 901093, 901095, 901096, 901097, 901098, 901099, 901102, 901106, 901107, 901111, 901113, 901115, 901116, 901119, 901122, 901126, 901127, 901129, 901130, 901133, 901134, 901135, 901137, 901140, 901141, 901142, 901143, 901145, 901146, 901147, 901148, 901149, 901151, 901152, 901156, 901162, 901165, 901169, 901172, 901176, 901178, 901180, 901181, 901184, 901185, 901189, 901191, 901192, 901193, 901195, 901196, 901197, 901198, 901200, 901201, 901202,			<b>Note:</b> <b>No. 295031</b> Ratchet - Rewind Starter	
220538	Bushing - Crankcase Cover				Used on type Nos. 901099,	
<b>Note:</b> Requires special tools for installation.						
220574	Washer - Starter Clutch, Thrust					
220575	Washer - Clutch Retainer					
220581	Cover - Cylinder Head					
<b>Note:</b> <b>No. 220354</b> Cover - Cylinder Head						
Used on type No. 901107.						
220648	Screen - Recoil Starter					
220675	Shield - Ignition Coil					
220689	Crank - Bell					
220698	Bracket - Control Casing					
220712	Pulley - Rope Starter					
220713	Washer - Pinion Guard					
220714	Guard - Electric Starter Chain					
220732	Lock - Starter Pulley Screw					
220745	Clamp - Starter Clutch					
220746	Washer - Thrust					
220749	Bracket - Starter Support					

PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION
	901105, 901129, 901156, 901222, 901223, 901224, 901237, 901248. Uses <b>No. 66688</b> Washer – Sealing	<b>293525</b>	Gasket Set		901207, 901208, 901214, 901221, 901222, 901223, 901230, 901234, 901237, 901240, 901241, 901242. <b>No. 294768</b> Carburetor Assembly
<b>290568</b>	Lever Assembly – Control	<b>293700</b>	Pipe – Fuel		Used on type Nos. 901095, 901204.
<b>290584</b>	Base – Control Lever	<b>293708</b>	Bushing – Cylinder (Requires Special Tools For Installation)	<b>No. 295030</b>	Carburetor Assembly (Choke-A-Matic)
<b>290642</b>	Lever – Control	<b>293740</b>	Seal – Oil		Used on type Nos. 901185, 901189, 901224, 901235.
<b>290779</b>	Case Assembly – Gear	<b>293959</b>	Starter Pulley With Screen	Uses: <b>No. 93160</b> Screw – Fillister Head	
<b>290802</b>	Shaft Assembly – Drive	<b>293991</b>	Body Assembly – Air Cleaner	(To mount Speed Adjuster Lever and Choke Lever)	
<b>291617</b>	Armature – Magneto	<b>294064</b>	Ring Set – .040" O.S. Piston	<b>No. 220955</b> Lever – Choke	
<b>291630</b>	Shield – Spark Plug (with stop switch)	<b>294065</b>	Piston Assembly – .040" O.S.	<b>No. 230450</b> Bushing – Lever	
<b>291730</b>	Cover Assembly – Gear Case	<b>294088</b>	Pulley – Recoil Starter	<b>No. 260192</b> Link – Choke	
<b>291834</b>	Tank Assembly – Fuel	<b>294178</b>	Breather – Valve Chamber	<b>No. 295022</b> Plate Assembly – Stop Switch Insulator	
	<b>Note: No. 29865</b> Tank Assembly – Fuel	<b>294237</b>	Motor – Electric Starting	Uses: <b>No. 93167</b> Screw – Ground Wire	
	Used on type No. 901165.	<b>294240</b>	Clutch Assembly – Electric Starter	<b>No. 295023</b> Wire – Ground	
	Uses <b>No. 29863</b> Outlet Assembly	<b>294243</b>	Chain – Electric Starter Drive	<b>No. 295071</b> Carburetor Assembly	
	<b>No. 62007</b> Clamp – Tank Holding (2)	<b>294245</b>	Screen – Electric Starter Rotating	Used on type Nos. 901186, 901245.	
	<b>No. 63058</b> Connector – Fuel Pipe	<b>294260</b>	Housing – Blower (Rewind Starter)	<b>No. 295104</b> Carburetor Assembly (Choke-A-Matic)	
	<b>No. 65294</b> Gasket – Outlet Assembly		<b>Note: No. 294282</b> Housing – Blower (Rewind Starter)	Used on type Nos. 901196, 901202.	
	<b>No. 65787</b> Gasket – Connector		Used on type Nos. 901102, 901184, 901210.	Uses: <b>No. 93177</b> Screw – Fillister Head	
	<b>No. 69335</b> Pipe – Fuel		<b>No. 294338</b> Housing – Blower (Rewind Starter)	(To Mount Speed Adjuster Lever, Choke Lever, and Bell Crank)	
<b>291925</b>	Pin Assembly – Piston – Std.		Used on type Nos. 901051, 901099, 901126, 901170, 901194, 901208, 901218, 901223, 901224, 901225, 901229, 901234, 901240.	<b>No. 220955</b> Lever – Choke	
<b>291926</b>	Pin Assembly – Piston – .005" O.S.	<b>294263</b>	Housing – Blower (Rope Starter)	<b>No. 220981</b> Lever – Bell Crank	
<b>292037</b>	Cover and Filter – Air Cleaner	<b>294264</b>	Clutch Assembly – Rewind Starter	<b>No. 220982</b> Washer – Spacer	
	<b>Note: No. 220874</b> Cover – Carburetor Intake		<b>Note: No. 294470</b> Clutch Assembly – Rewind Starter	<b>No. 230471</b> Bushing – Lever	
	Used on type Nos. 901145, 901146, 901151, 901153, 901162, 901165, 901184, 901217, 901239.		Used on type Nos. 901099, 901105, 901129, 901156, 901222, 901223, 901224, 901237, 901248.	<b>No. 260192</b> Link – Choke	
	Uses <b>No. 230412</b> Spacer		Includes: <b>No. 66688</b> Washer – Ratchet Sealing	<b>No. 295022</b> Plate Assembly – Stop Switch Insulator	
	<b>No. 92290</b> Washer – Lock	<b>294291</b>	Housing – Blower (Electric Starter)	Uses: <b>No. 93167</b> Screw – Ground Wire	
	<b>No. 91225</b> Screw – Machine, Fill. Hd. – No. 10-32 x 1"	<b>294298</b>	Blade – Governor		
<b>292046</b>	Spring – Starter	<b>294299</b>	Carburetor Assembly		
<b>292149</b>	Cable – Ignition		<b>Note: No. 294336</b> Carburetor Assembly		
	<b>Note: No. 294577</b> Cable – Ignition		Used on type Nos. 901057, 901058, 901071, 901073, 901074, 901152, 901195.		
	Used on type Nos. 901078, 901166, 901221.		<b>No. 294339</b> Carburetor Assembly		
<b>293400</b>	Piston Assembly – Standard		Used on type Nos. 901023, 901053, 901054, 901059, 901078, 901092, 901107, 901108, 901111, 901117, 901125, 901127, 901132, 901140, 901143, 901148, 901171, 901172, 901173, 901176, 901177, 901193, 901200, 901201, 901203,		
<b>293401</b>	Piston Assembly – .010" O.S.				
<b>293402</b>	Piston Assembly – .020" O.S.				
<b>293403</b>	Piston Assembly – .030" O.S.				
<b>293424</b>	Control – Governor				
<b>293506</b>	Ring Set – Standard Piston				
<b>293507</b>	Ring Set – .010" O.S. Piston				
<b>293508</b>	Ring Set – .020" O.S. Piston				
<b>293509</b>	Ring Set – .030" O.S. Piston				
<b>293517</b>	Cleaner Assembly – Air (Used with Stud No. 230058)				

PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.	DESCRIPTION
	<b>No. 295023</b> Wire – Ground	<b>294342</b>	Adapter – Shaft		901161, 901174, 901190, 901191, 901206, 901210, 901212, 901213, 901219, 901239, 901243, 901244.
<b>294300</b>	Rod Assembly – Connecting	<b>294343</b>	Sprocket – Electric Starter		
<b>294301</b>	Cylinder Assembly	<b>294502</b>	Bracket – Control Wire Casing	<b>294861</b>	Cover and Filter – Air Cleaner
<b>Note:</b>	<b>No. 295086</b> Cylinder Assembly	<b>294575</b>	Link – Starter Chain Master	<b>Note:</b>	<b>No. 294862</b> Cover and Filter – Air Cleaner
	Used on type No. 901203.	<b>294628</b>	Breaker Points and Condenser Set		Used on type Nos. 901214, 901223, 901224.
<b>294303</b>	Spring – Rewind Starter		<b>No. 293999</b> Wire – Condenser Ground	<b>294870</b>	Cleaner Assembly – Air (with mounting stud)
<b>294305</b>	Cover Assembly – Crankcase		<b>No. 92791</b> Washer – Lock – Shakeproof (2)	<b>Note:</b>	<b>No. 294871</b> Cleaner Assembly – Air (with mounting stud)
<b>294306</b>	Cover Assembly – Crankcase (Used on Model 6B-SFB)	<b>Note:</b>	<b>No. 90576</b> Nut – Hex. – 8-32		Used on type Nos. 901214, 901223, 901224.
<b>294308</b>	Cover Assembly – Crankcase (Used on Model 6B-SF)		<b>No. 90072</b> Screw – Machine, Rd. Hd. – 8-32 x $\frac{5}{8}$ "		
<b>Note:</b>	<b>No. 295166</b> Cover Assembly – Crankcase		<b>No. 66895</b> Insulator – Terminal		
	Used on type Nos. 901217, 901220.		Used on type Nos. 901066, 901112, 901131, 901158, 901160,		

